WINCH UPGRADE

	New Handle on a new winch
	Winch Break Counter Bearing over the shaft

Mil–tek USA ▪ 10 Export Dr. ▪ Sterling, VA 20164 ▪ T. (877) 664-58 ▪ F. (571) 267-7449
miltek@miltekusa.com ▪ www.miltekusa.com
© This document is property of Mil-tek USA and is only to be used for internal purposes within the worldwide Mil-tek organization and may NOT by any means be passed on to any third party.

WINCH UPGRADE

	Close up of the Break Counter Bearing space
	Brake Disc loose

Mil–tek USA ▪ 10 Export Dr. ▪ Sterling, VA 20164 ▪ T. (877) 664-58 ▪ F. (571) 267-7449
miltek@miltekusa.com ▪ www.miltekusa.com
© This document is property of Mil-tek USA and is only to be used for internal purposes within the worldwide Mil-tek organization and may NOT by any means be passed on to any third party.

WINCH UPGRADE

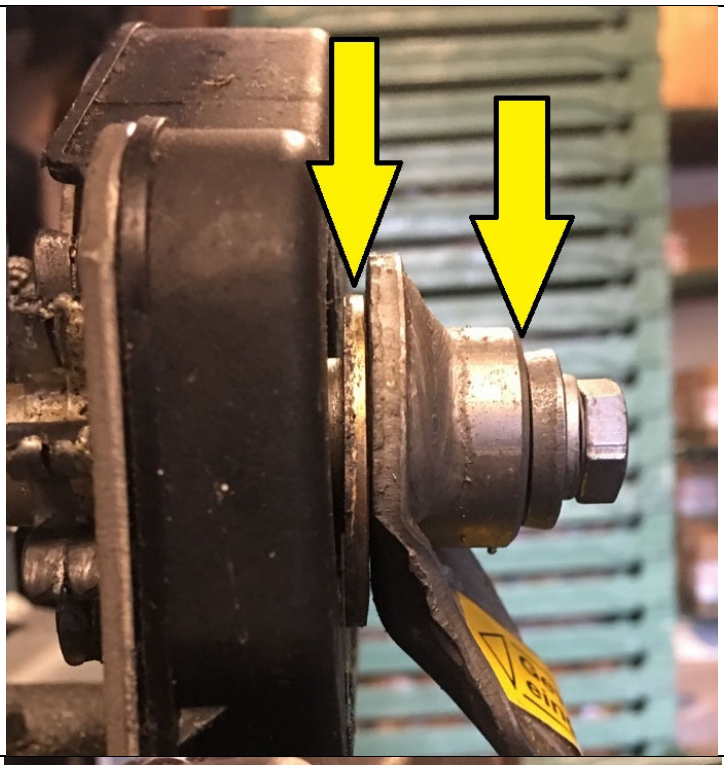	If the bolt that holds the handle has gotten loose and the handle has backed off, the available clearance would allow the handle to come back out until it touches the thick washer
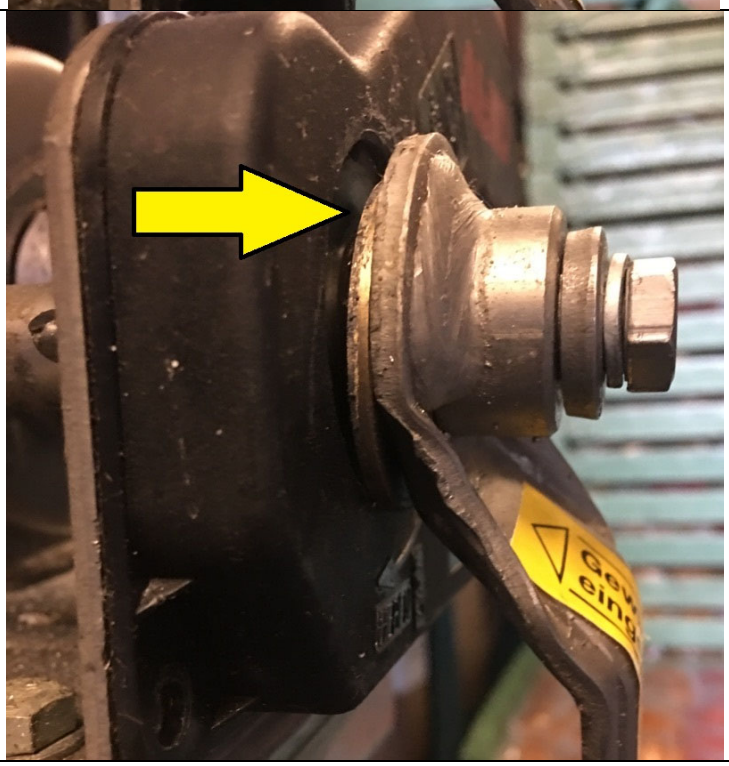	The Brake Disc comes off the shaft but the handle still secure. At this stage the winch will not click anymore unless the disk is reset in place in the shaft

Mil–tek USA ▪ 10 Export Dr. ▪ Sterling, VA 20164 ▪ T. (877) 664-58 ▪ F. (571) 267-7449
miltek@miltekusa.com ▪ www.miltekusa.com
© This document is property of Mil-tek USA and is only to be used for internal purposes within the worldwide Mil-tek organization and may NOT by any means be passed on to any third party.