Replacing The Locking Bar

	This is call a locking device or door bar latch This is the part that will need to be exchange onsite
	This is where the locking device is located at (right side of the drum)
	It is held by 4 small screws on a tide fit. When removing and replacing we recomment not tighten until all 4 screws are in position. Occasionally one of them will not aligned correctly. If so, you might have to drill the hole a little bit more.
	Upon completing installation, open the handle and adjust screw as shown on the picture with a small flat screw driver. It must have tension whenever you close the handle. Make sure it is not left loose as it will pup open easily.
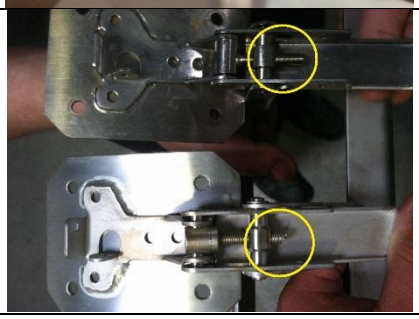	When adjusting the screw, you will need to make sure the pin moves from one end to the other as shown on the picture

Mil-tek USA ▪ 10 Export Dr. ▪ Sterling, VA 20164 ▪ T. (877) 664-58 ▪ F. (571) 267-7449
miltek@miltekusa.com ▪ www.miltekusa.com
© This document is property of Mil-tek USA and is only to be used for internal purposes within the worldwide Mil-tek organization and may NOT by any means be passed on to any third party.